



Exterior Keypad Code



The first step in setting up your keypad is to enter program mode and change the master code. The default master code is 1234.

1. Enter Program Mode

Press: 99 # master code * (Yellow LED Flashes Slowly)

2. Change Master Code

Press: 1 # new master code * repeat code *

(Yellow LED Flashes Slowly)

3. Exit Program Mode

Press: * (Yellow LED Stops Flashing)